



CD-W01 User Manual

catalogue

I . Use Tutorial..... 2  
 II. Function Setting Instructions..... 6  
 III. Product Parameter..... 19

**I . Use the introduction**

**Installation and replacement of the Micro SD card**

1. This camera has no built-in storage, please insert the Micro SD storage card before using the camera.
2. Push the Micro SD storage card front down and into the Micro SD card slot (as shown).
3. Please press the micro SD card inward. The card automatically pops up in the first half. A "click" sound will be heard while inserting and pulling the card.



**Installation the Battery**



Press the battery door pull button in the arrow direction of (OPEN ▲), open the battery door outward, load the battery as shown in the figure above (the red arrow on the battery), and close the battery door (note: the battery door pull button must be completely closed, otherwise there is a water risk).

**NOTE:**

- Please use Micro SD above C6.
- Micro SD After the card is inserted into the camera card slot, please immediately format the card on the camera; or to format the card on the computer. If you still do not read, please replace the Micro SD card.

**1. Powering the Camera On/Off**

⏻ Press and hold the POWER button for 3 seconds to power the camera on. To power the camera off, press the POWER button again

If the camera's battery is low, a "Low Power" message will display on the screen and it will automatically shut down within a few seconds to prevent memory corruption or loss.

**Function and description of the indicator.:**

1. When the camera is working, the blue indicator light is on.
2. Connect the camera to a computer or a charger through a USB cable, and the camera can charge.

3. During the charging process, the red indicator light is on, and after being fully charged, the indicator light goes off (the charging time is 90 minutes).

**Tip: Charge with a standard specification charger (5V-1A).**



Charger (5v) TYPE-C USB cable


**II. Function introduction (menu description)**




**1. Camera button**

After the card is plugged, the camera is in the default photo


mode. Press OK button to focus, press the camera button to take pictures directly, and press the shooting button in the camera mode to start the camera.(The camera autofocuses by default, and the first time after switching the shooting scene, the camera will first focus and then automatically take pictures.)

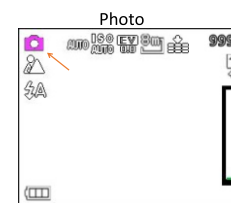

2.W / T: press T in camera mode or camera mode zoom +, W zoom-; press W in playback mode to enter the nine grid preview, press T to enlarge the details, W zoom out. Note: When timing or continuous shooting, press T and W without zoom.

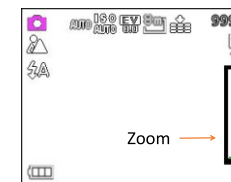


3. Flash / upper button in the photo mode button can set forced flash, off flash, automatic flash three modes, the camera on the default automatic flash.

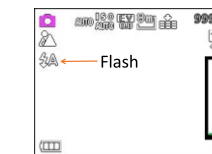

4. Special effects, photo frame / left button in the photo mode button can be switched in normal and black and white, retro, red, blue, negative, green six effects and each photo


frame.(If you want to quickly exit the effects or photo box)

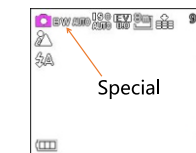

5. Delete / Right button in camera and playback mode, can call out the delete prompt interface, press OK to confirm the delete.




6. After the time photo / down the button, the camera default photo mode. Press the key, you can select 2 / 5 / 10 seconds timing photo and continuous shot.

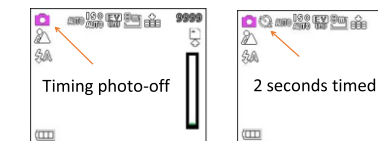


 



**7. MODE**

After boot, press the menu button MODE button to switch between photo, underwater, camera, playback mode; underwater mode has higher photo brightness, and the default flash is forced flash.

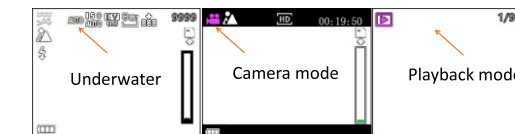Camera mode: press the shooting key to start shooting, press the shooting key to stop shooting.



**In the playback mode:** press up and down to select up and down, press W to zoom to browse. Under the nine grid, press MENU and keys  to switch different photos and videos; press OK to enter the current selected photo or video; press T for the current photo to enlarge the photo to view details; when playback the current video, you can press OK to play / pause the video, and press MODE to exit the playback.

8.OK /  Key Press OK / key  to focus in photo or video mode; press OK / key  in menu mode to confirm the submenu or select; if playback mode is a video file, press OK / key  to play or pause the video.

**9. MENU button**, in photo or video mode, press the MENU button to enter the photo or video Settings, press the upper and down keys to select the required options, and press OK to enter the next level of options or confirm the selection. Press the left / right button to switch the photo (video) parameter setting / system setting; press MENU to return to the previous level or exit the menu.


In playback mode, press MENU to lock, unlock, delete files, and slide your photos.

1) **Image Size Selection** After entering the menu in photo mode,

press the button to select the image size, press the OK button to confirm the entry, then press the top or down button to select the photo size, and press the OK button to confirm the selection.




**2) After entering the menu**, press the key, select autofocus, press OK to confirm the selection, press up / down to select close or open, and press OK to confirm the setting.

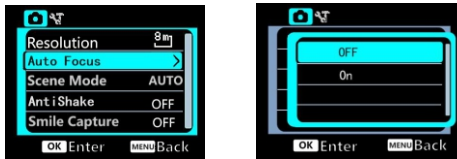


3) **Date and Time Setting After entering the menu**, press the right key to switch the system Settings, press the key to select the date and time, and press the OK key to enter the time setting. Press the left / right key to switch the year / month / day and time, press the up key or down key to adjust the date and time, and press the OK key to complete the setting.




4) **Daystamp setting After entering the menu**, press the key to select the daystamp, and press the OK key to confirm the selection. Press up or down to switch the close / date / date time option, press OK to confirm the selection.

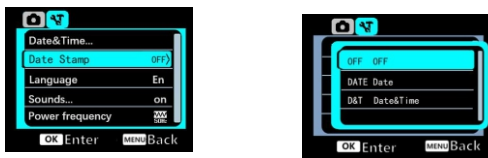

5) **Language Settings After entering the menu**, press the key to select the language, and press the OK key to confirm the selection. Press up or down to switch the language options, and press OK to complete the setting.(Eleven languages)

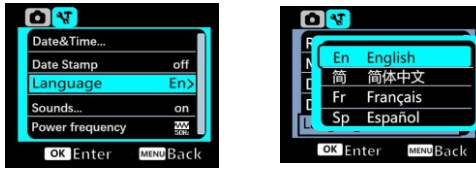

6) **Format After entering the menu**, press the key to select the formatting, and press the OK key to confirm the selection. Press the upper key or the next key to select whether to format the memory card, and press the OK key to confirm the selection.

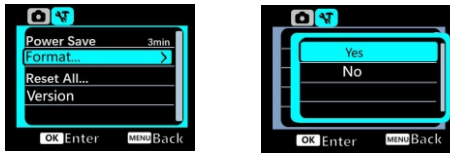

### The camera is connected to the computer

After connecting the computer to the camera with a USB cable, an "MSDC" appears on the screen. Find the corresponding disk in my computer, open the disk, you can view the photos and video taken.

## III. Product Parameter

product size	109mmX68mmX31mm
display screen	A 2.4-inch IPS screen
Image sensor	1 / 4 " 5MP CMOS, Max48MP sensor
photograph	Format: JPG; Dimensions: 5MP, 8MP, 12MP, 18MP, 24MP, 30M, 40M, 48M
video frequency	Format: AVI; 1080P 1920X1080 30FPS, 720P 1280X720 30FPS
Date timestamp	Close, yue period, yue period time
sound	Close, open
Support language	English, Simplified Chinese, French, Spanish, German, Italian, Portuguese, Dutch, Master English, Russian, Arabic

Audio recording	Built-in microphone for recording
Battery type	Lithium battery NP20 3.7V 630mAh
storage class	External Micro SD card, up to 32GB support
PC joggle	TYPE-C /USB
classification of waterproof	IP68
Waterproof depth	<5 Meters

### Frequently asked problems and matters needing attention

1. What is the camera prompt error when inserting the memory card? How to solve it?

Try to format the memory card first, if not, or prompt after formatting. This is caused by the memory card error, please replace a new class6 or more memory card in this camera.

- If the camera is not used for a long time, remove the camera battery and place it in a dust-free, dry environment and a temperature no higher than 30°C.
- To extend the battery life, please complete the discharge before storage.

Please fully charge the battery at least once every 3 months.

- If the lens or display has dust or dirt, gently wipe it with a clean, soft lens cleaning cloth.
- Since this machine is a precision instrument, so do not make it fall or suffer strong impact or vibration.